




# Disassembling Arnova 7K G3 Logic Board Ribbon Connectors

This guide will show you how to disconnect the logic board ribbons from the logic board.

Written By: Kue

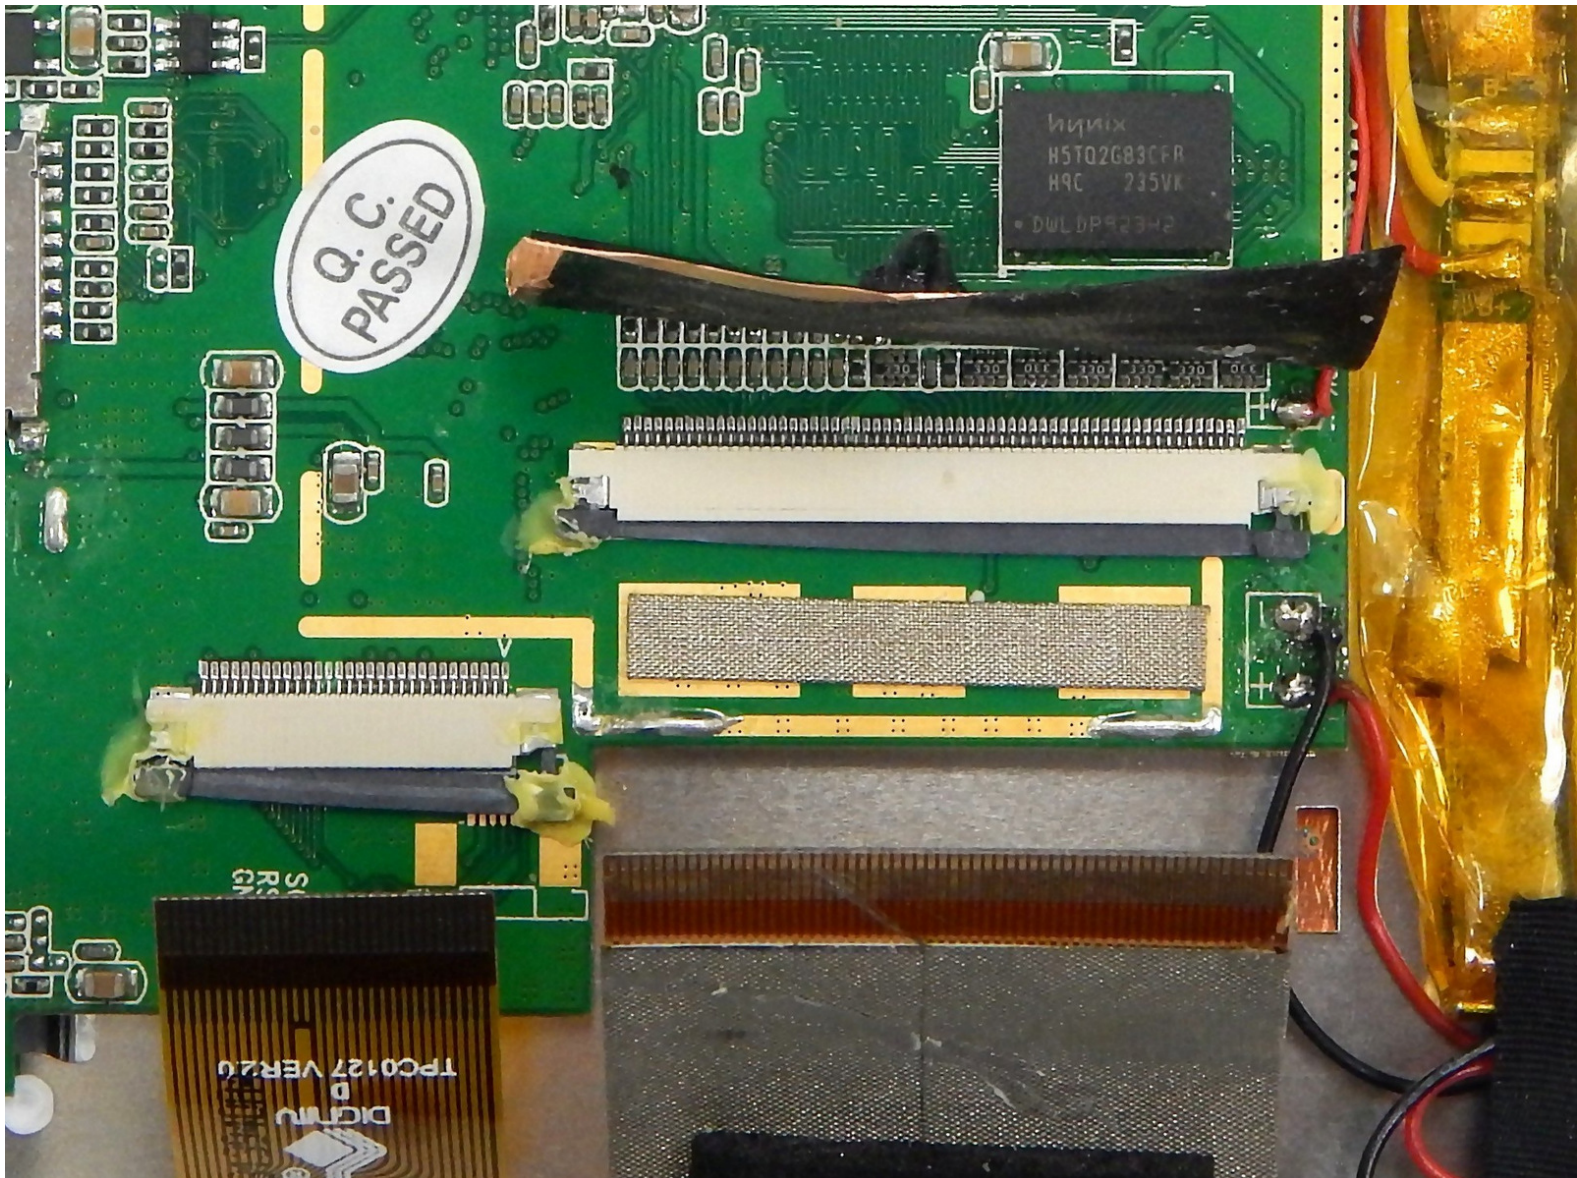

## INTRODUCTION

A device's logic board has many electrical connections to other components within the device. This guide, using the Arnova 7K G3 Rear Cover Removal guide as a prerequisite, shows how to remove the ribbon connections from the logic board, which may help in determining a bad ribbon connector or other faulty wiring.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-




## Step 1 — Disassembling Arnova 7K G3 Rear Cover



- Locate the four 5mm Phillips head screws, one at each corner of the tablet.
- Remove the screws using the Philips #00 screwdriver.

## Step 2

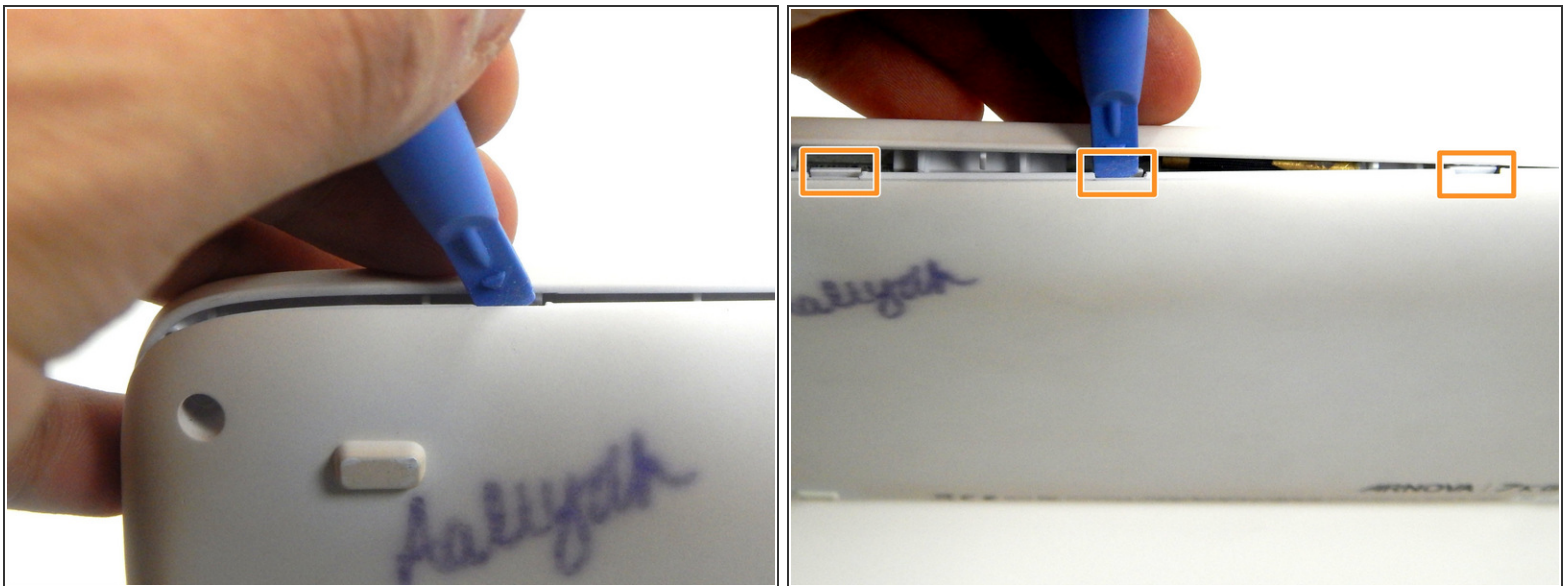

- Next step is to pull apart the front and rear cover using the iFixit Plastic Opening Tool.
- For that, locate the notches between the two cases.
- Place the tool in the notches and start separating the two covers apart.

### Step 3



- Repeat step two until 3/4th of the rear cover is unlatched.
- Proceed to remove the rear cover by gently pulling it apart by hand.


### Step 4 — Disassembling Arnova 7K G3 Logic Board Ribbon Connectors



- Locate the copper tape covering the ribbon connector one. Peel it with a set of tweezers.




## Step 5

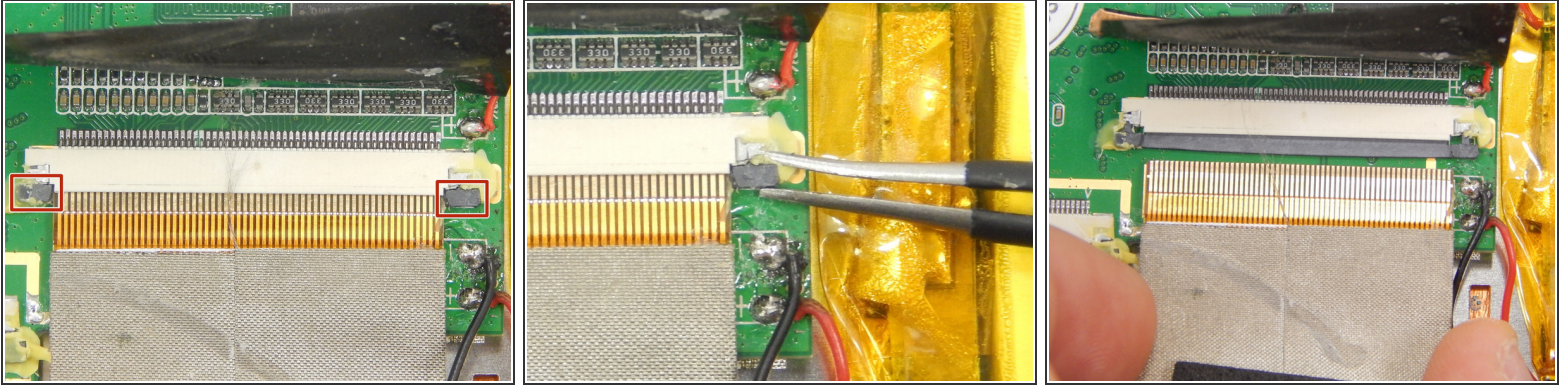

- Locate the two gray pins on the ribbon connector.
- Grab the first pin with tweezers and gently pull it towards the ribbon. Repeat the step.
- Gently pull the ribbon cable out of the connection port.

## Step 6

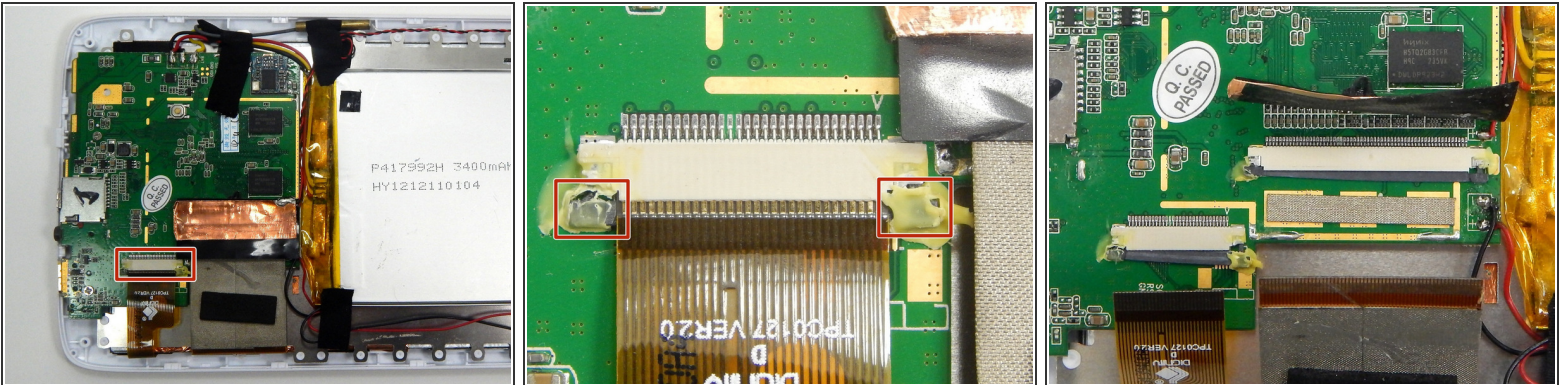

- Locate the ribbon connector two.
- Locate the pins of ribbon connector two. Repeat step two for unlocking the pins.
- Gently pull the ribbon out of the connection port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-14 03:45:30 PM.